



# BAKERLUX™ GO & LED OVENS QUICK START GUIDE

## PROGRAM QUICK ACCESS BUTTONS

1	Press <b>START / STOP</b> Button to activate control board.	
2	Press desired <b>PROGRAM</b> button <b>P1 - P12</b> . (Then, to access <b>P13-P99</b> , press <b>+</b> until desired program appears.)	
3	Press <b>“PRE”</b> button repeatedly until <b>“PRE”</b> [Preheat] LED lights up.)	
4	Set <b>PREHEAT TEMPERATURE</b> by pressing <b>+</b> / <b>-</b> , or use the slider bar until desired temperature appears.	
5	Press 1 button once (1 LED will light)	
6	Set <b>TIMER</b> by pressing <b>+</b> / <b>-</b> , or use the slider bar until desired time appears.	
7	To access <b>COOKING TEMPERATURE</b> , press  button once.	
8	Set <b>COOKING TEMPERATURE</b> by pressing <b>+</b> / <b>-</b> until desired temperature appears.	
9	<i>(Optional - for humidity; otherwise skip to 11)</i> In <b>LED</b> models, press <b>HUMIDITY</b> button once.	
10	Set <b>HUMIDITY</b> by pressing <b>+</b> / <b>-</b> until desired humidity % appears (from “oFF” to “100% in 20% increments.)	
11	<b>SAVE</b> the program by holding down the corresponding program number button for 3 seconds until you hear the beep.	

## STARTING A PROGRAM

1	Press <b>START / STOP</b> Button to activate control board.	
2	Press desired <b>PROGRAM</b> button <b>P1 - P12</b> . (Then, to access <b>P13-P99</b> , press <b>+</b> until desired program appears.)	
3	Press <b>START / STOP</b> Button to start program.	

## ADDING or SUBTRACTING PROGRAM TIME

1	Press <b>TIMER</b> button until the <b>TIME</b> is on the screen.	
2	While a program is running, you may press <b>+</b> / <b>-</b> to add or subtract time. This will not affect a saved program.	

## CONTINUOUS RUN SETTING

1	Press <b>TIMER</b> button until <b>000</b> is on the screen..	
2	Press <b>-</b> Button until <b>INF</b> appears on the LED screen.	
3	Press <b>START / STOP</b> Button.	

## STOP A PROGRAM IN PROGRESS

	Press and hold <b>START / STOP</b> Button for 2-3 seconds.	
--	--	--

## MANUAL OPERATION

1	Press <b>START / STOP</b> Button to activate control panel.	
2	Press <b>TIMER</b> Button. This will allow you to set a time.	
3	Set <b>TIMER</b> by pressing <b>+</b> / <b>-</b> , or use the slider bar until desired time appears. <i>(For continuous run, press <b>-</b> until <b>INF</b> appears on LED screen.)</i>	
4	Press  button once.	
5	Set <b>COOKING TEMPERATURE</b> by pressing <b>+</b> / <b>-</b> , or use the slider bar until desired temperature appears.	
6	<i>(Optional - for humidity; otherwise skip to 7.)</i> In <b>LED</b> models, press <b>HUMIDITY</b> button once.	
7	Set <b>HUMIDITY</b> by pressing <b>+</b> or <b>-</b> until desired humidity % appears (from “oFF” to “100% in 20% increments.)	
8	Press <b>START / STOP</b> Button to start the cooking cycle.	

See instruction manual for additional options & information



# BAKERLUX™ OVENS QUICK CLEANING GUIDE

**WARNING:** Before starting any maintenance or cleaning operation, you must disconnect the electrical power supply and wait for your oven to cool down.

## GENERAL

1. Wipe up any spills as they occur (after the oven has cooled down for 10-15 minutes.)
2. Never clean the oven cavity with acids, abrasives or aggressive detergents.
3. Never use a spray of water to clean the outside of your oven. This may damage the electrical components and void your warranty.

## DAILY CLEANING

1. **Unplug oven and let it cool down for 10-15 minutes. Door glass must be completely cool before cleaning.**
2. Clean the oven cavity and oven door gasket using only proper products (degreaser, damp cloth.)
3. Never clean the oven cavity with acids, abrasives, or aggressive detergents.
4. Pull out and clean oven side racks and wire shelves separately, then replace when done.
5. For heavily soiled areas, let degreaser sit to penetrate before wiping with damp cloth or scrub pad.
6. Wipe door handle, door glass (inner and outer), and oven control panel using only proper products (detergent, damp cloth.)
7. Wipe dry after each cleaning process.

## WEEKLY CLEANING

1. Follow protocol for Daily Cleaning.
2. Remove and clean oven door gasket
  - Pull gasket out of the channel.
  - Clean with detergent & water or dishwasher.
  - Dry and let sit.
  - To replace after cleaning, push back into channel around oven door.
3. Clean the outside of the oven using only proper products (degreaser, damp cloth.)
4. Never clean the oven with acids, abrasives, or aggressive detergents.
5. Wipe dry after each cleaning process.

## CLEANING THE OVEN DOOR GLASS

**Door glass must be completely cool before cleaning.**

\*Clean each door glass using only proper products (detergent, damp cloth or sponge, &/or Scotchbrite pad.) Rinse glass and dry it completely.

### FOR TOP-OPENING DOORS:



1. Open oven door fully.



2. Clean back of outer door glass & front of inner door glass.\*



3. Clean back of inner door glass.\*



4. Close door & clean front of outer door glass.\*

### FOR SIDE-OPENING DOORS:



1. Open door fully. Depress glass holder clips on top & bottom of inside door, & swing open inner door glass.



2. Clean back of outer door glass & front of inner door glass.\*



3. Swing inner door glass forward until top & bottom glass holder clips click & hold glass. Clean back of inner door glass.\*