
 





 





FAST COOKING OVENS QUICK START GUIDE

STEP (MANUAL) MODE		
1	Your oven is factory preset to STEP MODE . Plug the oven into correct outlet and touch the dark LCD screen. After 3 seconds the PREHEAT? screen will appear. Press YES if proceeding to cooking, or NO to go to SETTINGS .	
2	If you chose YES , the PREHEATING screen will appear. (Preheat temps are factory preset to 450F on 120V units and 425F on 220V units. To modify, at Step 1 above, go to SETTINGS> Adjust Temps> Modify> Adjust Preheat.)	
3	When preheating is done, press SET COOK TIME on the next screen.	
4	The COOK TIME OPTIONS SCREEN 1 will appear. If your desired time appears, press it. (If you need longer cook time, press NEXT and the COOK TIME OPTIONS SCREEN 2 will appear. Press desired time.) CONVECTION HEAT (hot air circulated by rear fan) will run for this time.	
5	When you press the desired cook time in Step 4, the RADIANT HEAT DURATION screen appears. Choose % of total cook time that you want to add RADIANT/ INFRARED (top) HEAT to the CONVECTION HEAT .	
6	On next screen, press START . Cooking will begin and time will count down. (Pressing STOP will stop the cooking, and screen will revert to beginning of choosing STEP MODE COOK TIME .)	
7	When cook time is done, flashing DONE screen will appear and beeper will sound continuously. 	
8	When user opens the oven door, DOOR OPEN screen will appear.	



FAST COOKING OVENS QUICK START GUIDE

SWITCHING TO PROGRAM MODE	
1	Your oven is factory preset to STEP MODE . To switch to PROGRAM MODE , plug the oven into correct outlet and touch the dark LCD screen. After 3 seconds the PREHEAT? screen will appear. Press NO to get to SETTINGS .
2	On the next screen, press SETTINGS .
3	When the ENTER PASSWORD screen appears, enter 1234 (the factory preset password), then choose NEXT . (Password may be changed in the SETTINGS menu.)
4	On the next screen (SETTINGS MENU 1), press the yellow arrow.
5	SETTINGS MENU 2 will appear.
6	On SETTINGS MENU 2 , press MODE .
7	On the next screen, press PROGRAM MODE .
8	The PROGRAM MAIN MENU will appear. Your oven will stay in PROGRAM MODE unless/ until you switch it back to STEP MODE .

STARTING A PRESET RECIPE	
1	Press RECIPES on the PROGRAMS MAIN MENU .
2	On the next screen, press desired DAYPART .
3	On next screen, press DESIRED RECIPE NAME . (If desired recipe is not listed, press NEXT for additional recipe names.)
4	On next screen, press START under THICK or THIN .
5	On next screen, RECIPE COUNTDOWN appears.
6	When countdown is done, flashing DONE screen appears, and oven beeps continuously until door is opened.
7	When oven door is closed, the PROGRAM MAIN MENU will appear again.
8	See instruction manual for the settings of the factory-preset recipes, how to change the preset settings (in RECIPE DEVELOPMENT menu), and how to upload your own recipes via USB (in SETTINGS menu).